




Hanging Possum Cubby

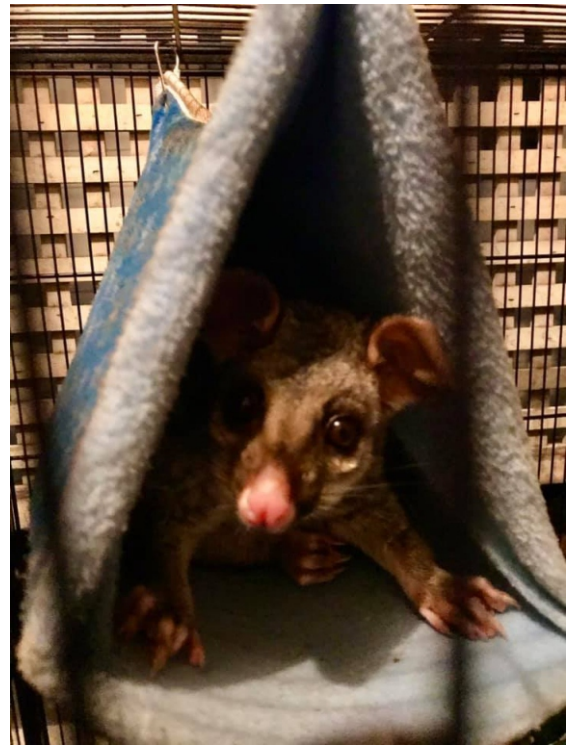

NOTE- by the final stages this design requires sewing of up to 4 layers of fleece and 4 layers of cotton tape. Not all sewing machines will be happy about this.

Designed with cotton tape loops for clips to avoid the need to use punched eyelets.

Materials

Polar Fleece- Outer and Liner - Use different fabric for each.
With careful cutting you can get 4 houses from just 2m of fabric (1m of each)

Cotton Tape

At least 3.5cm wide, wider is better - approx 45cm length

2 small carabineer clips- Optional

Can be found at discount or hardware stores

Flooring - Provided by carer

Removable for laundering- 18cmx28cm



Cutting

Cutting guide on final page for 2 x 1m of fleece

Only the template for the back wall is provided as all other parts are simple rectangles.

Dimensions below include a 1.5cm seam allowance

Keep to the recommended measurements so they all fit together.

Back wall - Cut 2 - 1x Outer, 1x Liner, pattern (next page)


Liner Walls/floor-Cut 1, Liner, - 32x65cm


Floor - Cut 2, Outer - 21x32cm

Side Walls - Cut 2, Outer - 25x32cm


If you would like to reduce the seam allowance the actual dimensions of the finished pieces are:-

Back Wall-As per inner line of template, Liner Walls/floor - 29x62cm, Walls (cut 2)-22x29cm, Floor (cut 2) 18x29cm

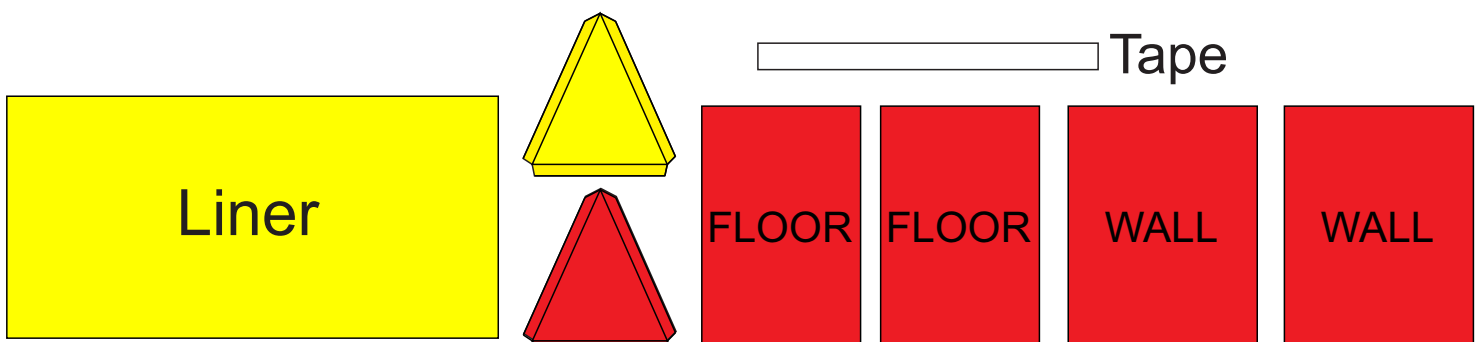

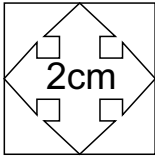

Print Check

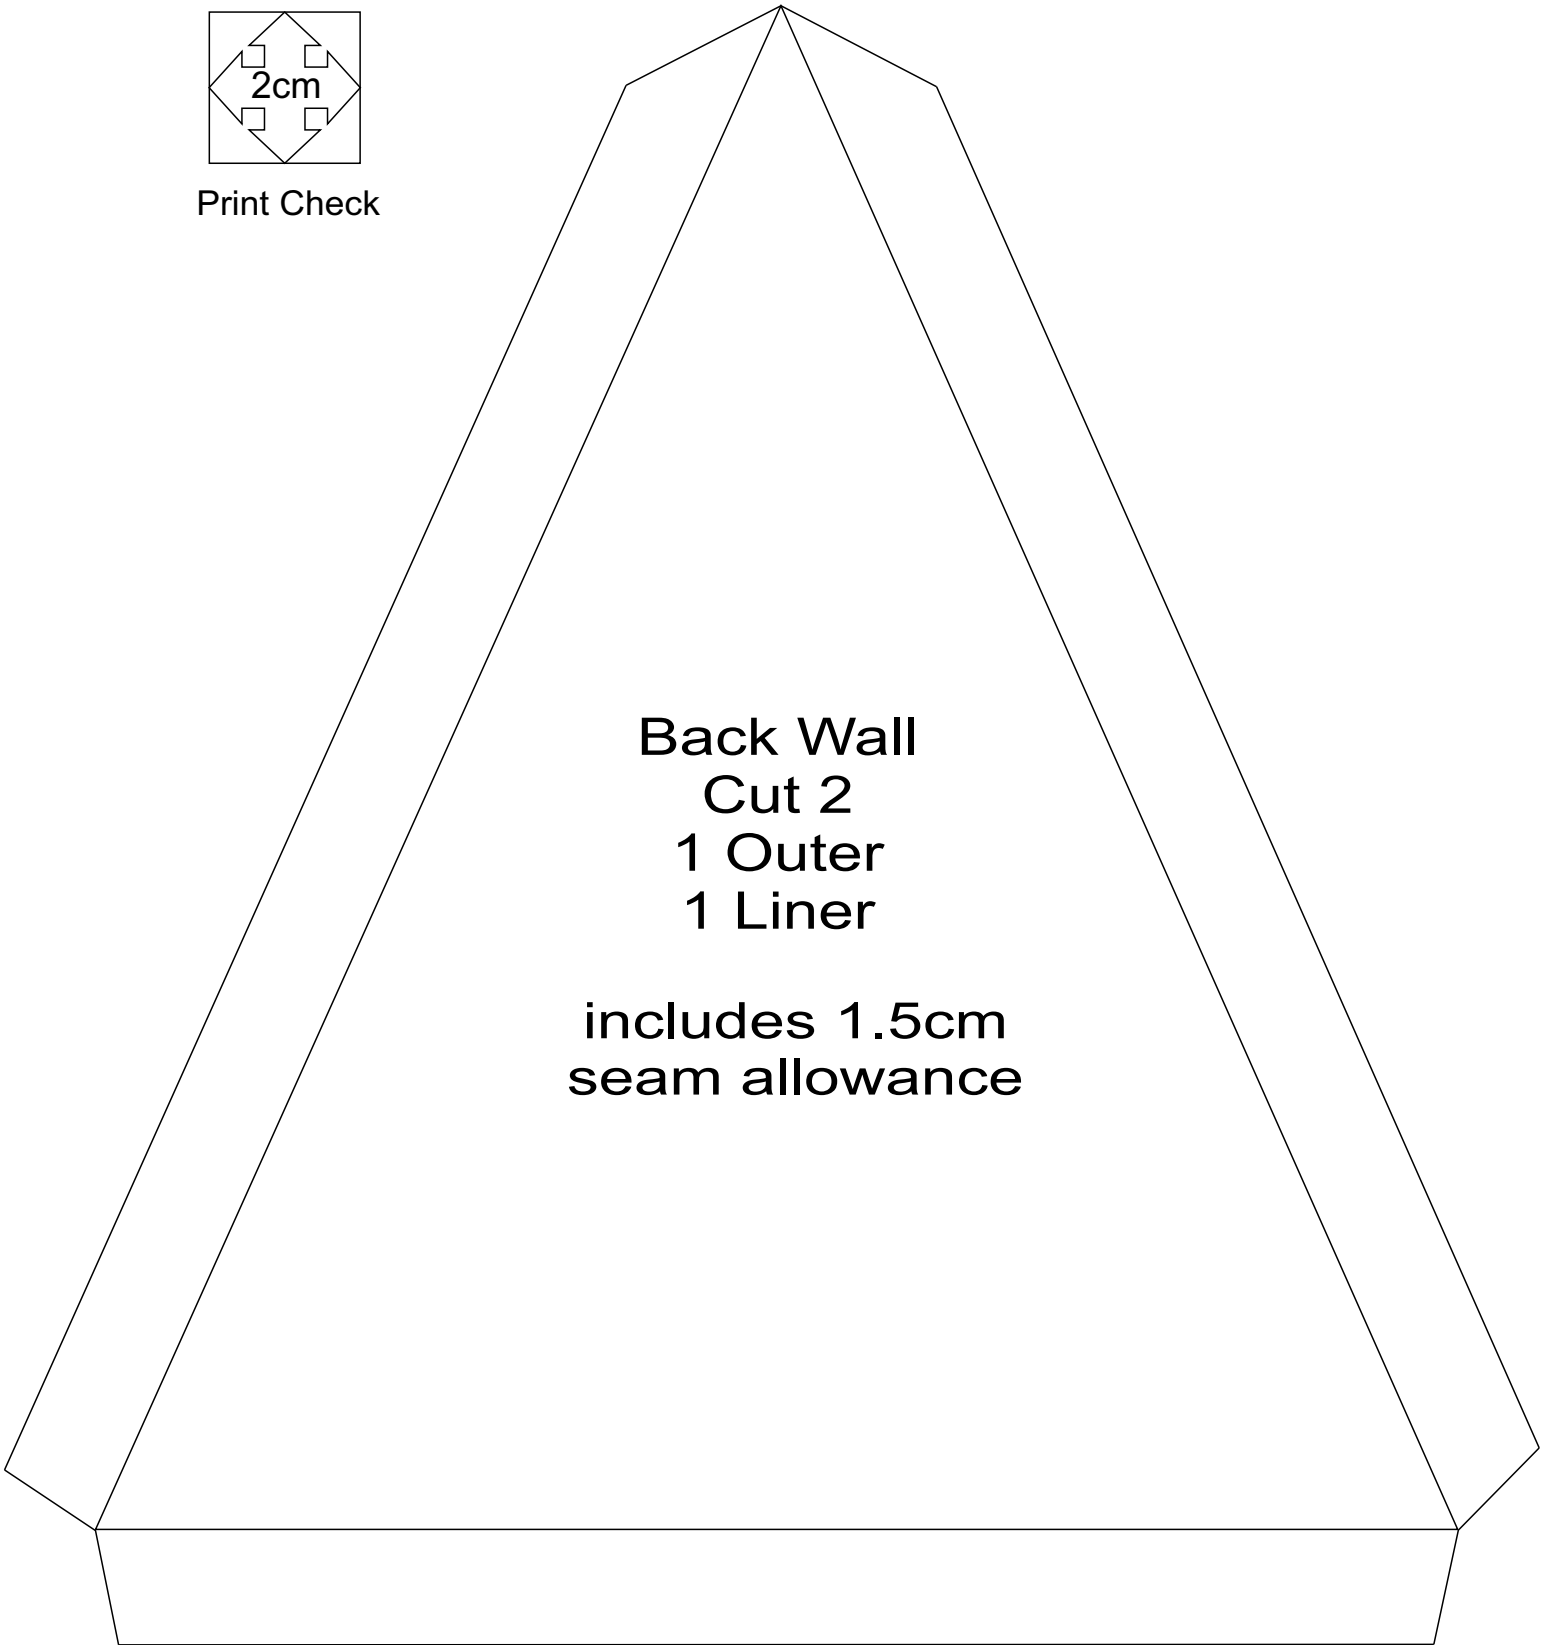

Back Wall

Cut 2

1 Outer

1 Liner

**includes 1.5cm
seam allowance**



Step One

From top of triangle, pin liner strip to liner back wall, with right sides together, sew 1.5cm seam



Step Two

Sew 1.5cm hem on one outer floor section. (rear short edge)



Step Three

Lay hemmed floor on second floor section, both right sides up, pin walls to each side. Sew 1.5cm seam



Step Four

This will create pocket at the rear bottom edge on the outside. The floor piece slides in here



Step Five

Starting at top point of triangle, pin joined wall/floor outer to outer back. Do not include hemmed section.



Step Six

Sew 1.5cm seam. Take care not to catch hemmed piece in the seam.



Step Seven

Pin liner to outer, right side together at front edge. ensure to pin all three layers together at floor.



Step Eight

Sew 1.5cm seam along front edge. Turn so outer and liner are both right side out



Step Nine

Sew a row of top stitching along front edge. Approx 0.5 cm from edge.



Step Ten

Pin all layers together at top.
Sew 1.5cm seam.
Trim to 0.5cm



Step Eleven

Leaving 2 cm for overlap,
fold 10cm to create 5cm loop,
pin at raw edge.



Step Twelve

Measure along top edge and make
a second loop at end. Pin with
2cm overlap, trim excess.



Step Thirteen

Pin tape over the top raw edge
along top seam. Leaving the
loops over edge.



Step Fourteen

Taking care to catch both edges of
the tape, fully enclosing raw edge,
sew along outer edge of tape.



Step Fifteen

Trim all threads, insert clips into
loops and your Possum Cubby
is complete



Side



Front



Back

Cutting Guide

Based on 1m of outer and 1m of liner fabric
148cm wide polar fleece

